

**ROYAL CONTA****FORD**

Transit Connect 1.8 TDCI 90 HP 06.02 → • Transit Connect 1.8 TDDI 75 HP 06.02 → Transit Connect 1.8 TDCI 110 HP 08.06 →
Tourneo Connect 1.8 TDCI 110 HP 08.06 → Tourneo Connect 1.8 DI 75 HP 06.02 → • Focus 1.8 TDCI 115 HP 03.01-11.04


Engine / Motor: BHDA-BHDB-BHPA/Endura-DI 1753cc 75 HP

C9DA-C9DB-C9DC/Endura DI 1753cc 90HP

HCPA-HCPB-KHBA/Duatorq-TDCI 90 HP 1753cc

RWPA/Duratorq-TDCI 110 HP 1753 cc

Tüm saplamalar
yandaki şemaya göre sırayla;
Belirtilen tork değeri ve açiya göre sıkılır. ►

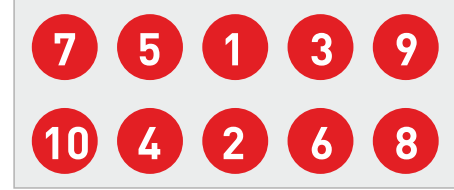

Uygun kalınlıktaki contayı, piston yüksekliğine göre karşılık gelen çentik sayısı ve referansımızı kullanarak belirleyiniz.

Tork ve Derecesi	Cıvata	Piston Yüksekliği	Çentik	Royal No
1. Aşama: 20 Nm	M12 x 1,75 x 137	 0.550 - 0.600	 2	439.010 MLS?
2. Aşama: 54 Nm	M12 x 1,75 x 177	 0.601 - 0.650	 3	439.011 MLS?
3. Aşama: 90°		 0.651 - 0.700	 4	439.012 MLS
4. Aşama: 70° (M12-137) veya		 0.701 - 0.750	 5	439.013 MLS
4. Aşama: 90° (M12-177)		 0.751 - 0.800	 6	439.014 MLS
		 0.801 - 0.850	 7	439.015 MLS

Montajda yeni saplama
kullanmanız gerekmektedir.